

A-10C Radios

VHF AM: 116 – 151.975MHz (L-Alt + Nump+)

UHF: 225 – 339.975MHz (L-Alt + Nump-)

VHF FM: 30 – 76MHz (L-Shift + Nump-)


Setup VHF AM:

- Turn on radio – turn dial to TR.
- Set function knob to MAN.
- Enter frequency 1.
 - Set preset dial to channel 1.
 - Press LOAD button
- Enter frequency 2.
 - Set preset dial to channel 2.
 - Press LOAD button.
- (Repeat as many times as required)
- Set function knob to PRE
- Select desired channel with preset dial.



Setup UHF:

- Turn on radio – turn dial to MAIN
- .Set function knob to MNL
- .Enter frequency 1.
 - Set preset dial to channel 1.
 - Press LOAD button (under cover)
- Enter frequency 2.
 - Set preset dial to channel 2.
 - Press LOAD button (under cover)
- (Repeat as many times as required)
- Set function knob to PRESET
- Select desired channel with preset dial.

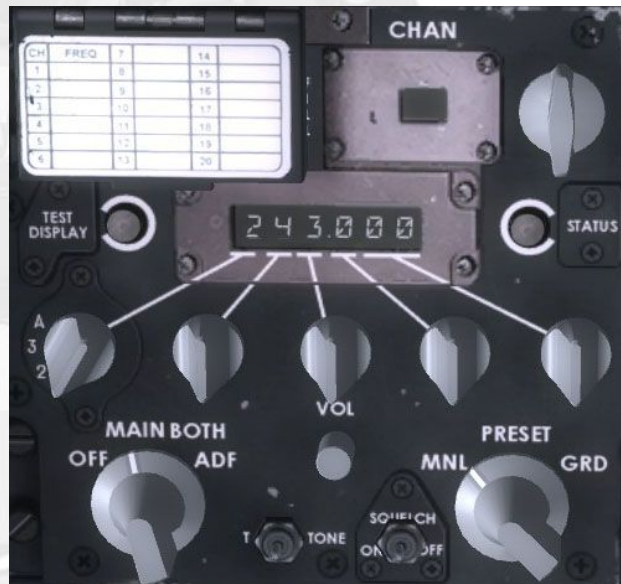

Setup VHF FM:

- Turn on radio – turn dial to TR.
- Set function knob to MAN.
- Enter frequency 1.
 - Set preset dial to channel 1.
 - Press LOAD button
- Enter frequency 2.
 - Set preset dial to channel 2.
 - Press LOAD button.
- (Repeat as many times as required)
- Set function knob to PRE
- Select desired channel with preset dial.

